

CHAPTER 6

6. SERVICING AND MAINTENANCE

TABLE OF CONTENTS

- 6.1 Introduction
 - 6.1.1 Maintenance System
 - 6.1.2 Maintenance Instructions
- 6.2 Routine Maintenance
 - 6.2.1 Pre-Flight Preparation
 - 6.2.2 Pre-Flight Check
 - 6.2.3 Post-Flight Check
 - 6.2.4 Engine Warm-Up, Power Check
- 6.3 Scheduled Maintenance
 - 6.3.1 Inspection after first 25 Hours of Operation
 - 6.3.2 Inspection after first 50 Hours of Operation
 - 6.3.3 Inspection after 100 Hours of Operation
 - 6.3.4 Inspection after 200 Hours of Operation
 - 6.3.5 Inspection after 600 Hours of Operation
 - 6.3.6 Lubrication Chart
- 6.4 Changes and Repairs of Aircraft In Operation
- 6.5 Ground Handling and Transportation
 - 6.5.1 Towing, On-Ground Manoeuvres.
 - 6.5.2 Parking and Housing Aircraft in Hangar
 - 6.5.3 Mooring
 - 6.5.4 Jacking and Shoring
 - 6.5.6 Transportation
- 6.6 Aircraft Cleaning and Servicing
 - 6.6.1 Outer Surface
 - 6.6.2 Propeller
 - 6.6.3 Engine
 - 6.6.4 Aircraft Interior, Seats, Upholstery
 - 6.6.5 Fuel Filling and Dumping